


REAR NO. 2 SUSPENSION ARM

COMPONENTS

SP

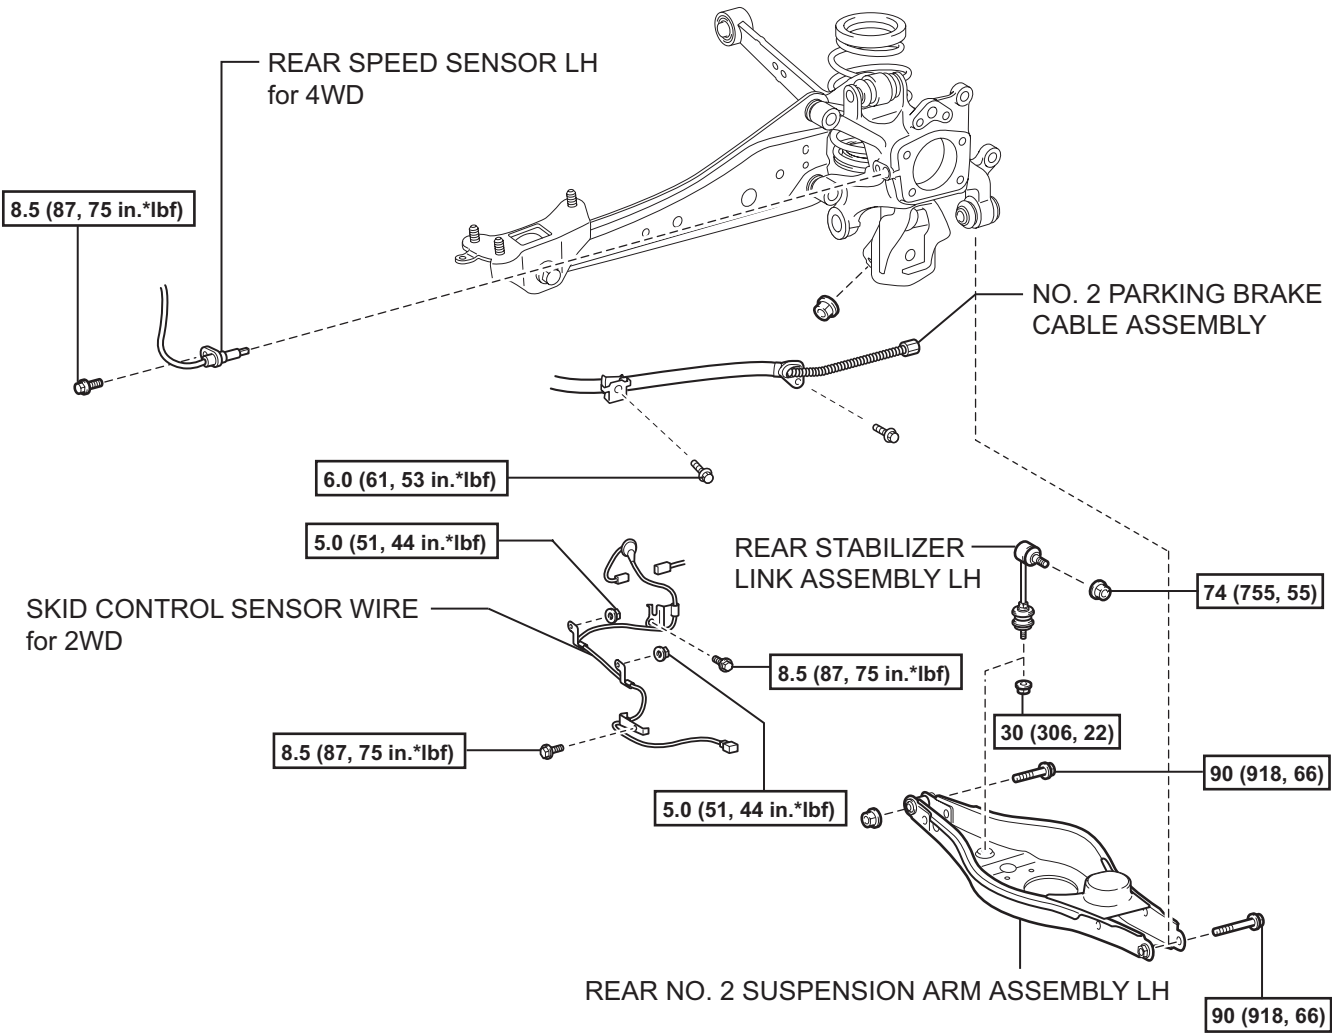

N*m (kgf*cm, ft.*lbf) : Specified torque

REMOVAL

HINT:

- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.



1. REMOVE REAR WHEEL
2. DISCONNECT NO. 2 PARKING BRAKE CABLE ASSEMBLY (See page [PB-8](#))
3. DISCONNECT SKID CONTROL SENSOR WIRE (for 2WD) (See page [BC-198](#))
4. DISCONNECT REAR SPEED SENSOR LH (for 4WD) (See page [BC-205](#))
5. DISCONNECT REAR STABILIZER LINK ASSEMBLY LH (See page [SP-50](#))
6. DISCONNECT REAR NO. 2 SUSPENSION ARM ASSEMBLY LH

- (a) Loosen the bolt from the suspension member side.

NOTICE:

Do not remove the bolt and nut. Only loosen them.


SP

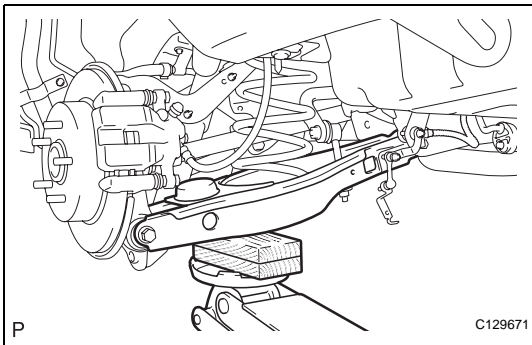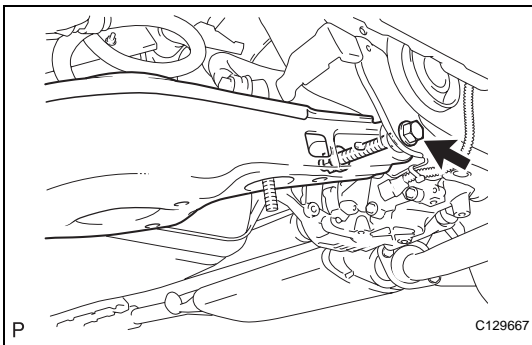

- (b) Support the No. 2 suspension arm LH with a jack.


NOTICE:

Place a wooden or rubber block between the jack and the arm.

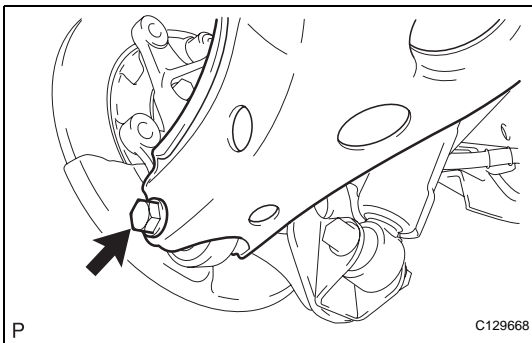

- (c) Remove the bolt and nut from the axle carrier side.
- (d) Slowly lower the jack, and disconnect the No. 2 suspension arm from the axle carrier.

7. REMOVE REAR COIL SPRING INSULATOR UPPER LH (See page [SP-33](#))
8. REMOVE REAR COIL SPRING LH (See page [SP-33](#))
9. REMOVE REAR COIL SPRING INSULATOR LOWER LH (See page [SP-33](#))

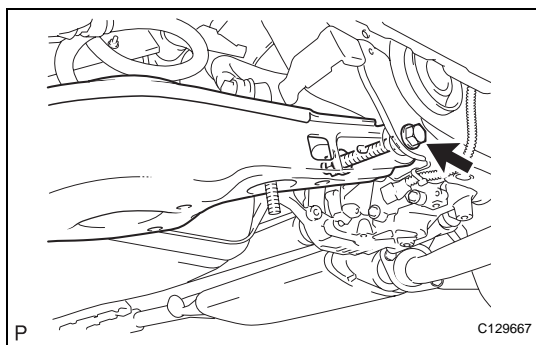



10. REMOVE REAR NO. 2 SUSPENSION ARM ASSEMBLY LH

- (a) Remove the bolt, nut and suspension arm from the suspension member.

INSTALLATION

HINT:

- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.

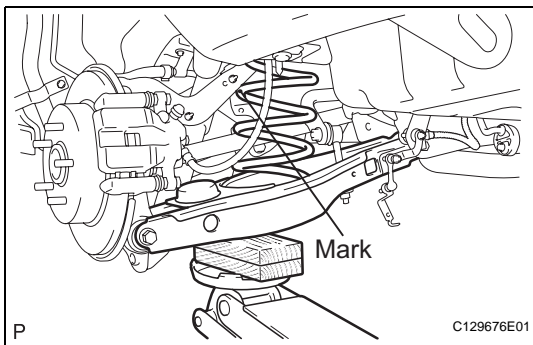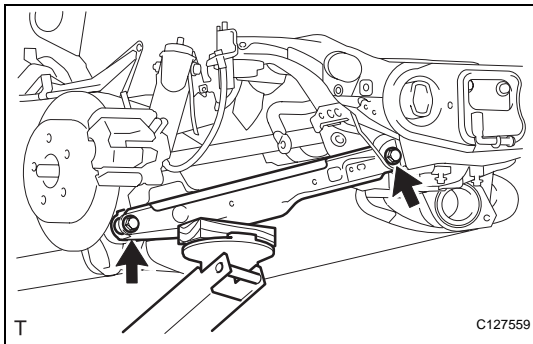

- 1. TEMPORARILY INSTALL REAR NO. 2 SUSPENSION ARM ASSEMBLY LH**
 - (a) Temporarily install the No. 2 suspension arm with the bolt and nut to the suspension member.
- 2. INSTALL REAR COIL SPRING INSULATOR LOWER LH** (See page [SP-34](#))
- 3. INSTALL REAR COIL SPRING LH** (See page [SP-34](#))
- 4. INSTALL REAR COIL SPRING INSULATOR UPPER LH** (See page [SP-34](#))
- 5. INSTALL REAR NO. 2 SUSPENSION ARM ASSEMBLY LH**
 - (a) Slowly raise the jack, and install the No. 2 suspension arm to the axle carrier.

NOTICE:
Install the arm so that the coil spring's distinguishing mark is on the outer side of the vehicle.
- 6. INSTALL REAR STABILIZER LINK ASSEMBLY LH** (See page [SP-52](#))
- 7. CONNECT SKID CONTROL SENSOR WIRE** (for 2WD) (See page [BC-198](#))
- 8. CONNECT REAR SPEED SENSOR LH** (for 4WD) (See page [BC-205](#))
- 9. CONNECT NO. 2 PARKING BRAKE CABLE ASSEMBLY** (See page [PB-8](#))
- 10. INSTALL REAR WHEEL**
 - (a) Install the wheel.
Torque: 103 N*m (1,050 kgf*cm, 76 ft.*lbf)
- 11. STABILIZE SUSPENSION** (See page [SP-37](#))
- 12. TIGHTEN REAR NO. 2 SUSPENSION ARM ASSEMBLY LH**
 - (a) Install the 2 nuts and 2 bolts.
Torque: 90 N*m (918 kgf*cm, 66 ft.*lbf)

NOTICE:
Do not tighten the nuts.
- 13. INSPECT AND ADJUST REAR WHEEL ALIGNMENT**
 - (a) Inspect and adjust the rear wheel alignment (see page [SP-7](#)).